



User Manuel

18x10W Bar

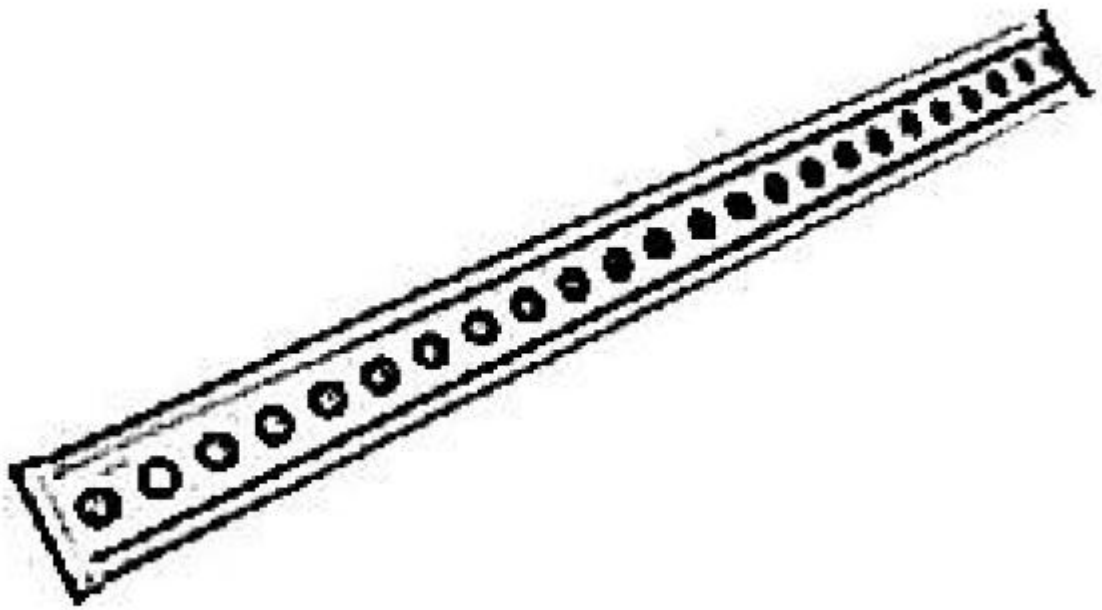

1. Display:

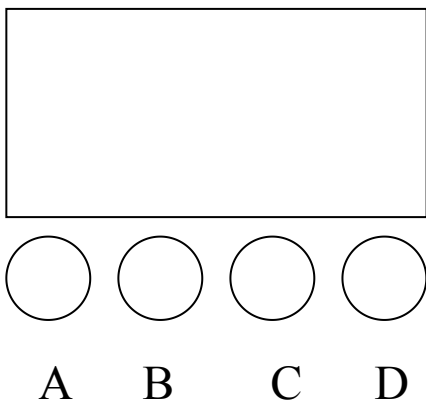

- A. Menu The main menu switch
- B. UP Parameters adjustment
- C. Down Parameters adjustment
- D. Enter confirm/preserve/enter submenu

2.LED Display window function table.

Nbr	Display	function
1	A001	8CHS mode , (001—512) Press B or C to setting the value
2	D001	4CHS mode , (001—512) Press B or C to setting the value
3	CC00	Auto color change 1, (01—99) Press B or C to choose speed
4	CP00	Auto color change 2 (01—99) Press B or C to choose speed
5	DE00	Auto color mixing change, (01—99) Press B or C to choose speed
6	R255	Static red, (00—25) Press B or C to setting the value
7	G255	Static green, (00—25) Press B or C to setting the value
8	B255	Static blue, (00—25) Press B or C to setting the value
9	W255	Static white, (00—25) Press B or C to setting the value

3. DMX512 8CHS mode

CH	FUNC	
CH1	dimmer	R、G、B、W total dimmer
CH2	strobe	R、G、B、W strobe
CH3	Function	0—50: DMX8CHS controllable; 51—100: color change 1; 101—150: color change 2; 151—200: color change 3; 201—255: sound active
CH4	speed	Control the speed of CH3
CH5	R	R 0-100%
CH6	G	G 0-100%
CH7	B	B 0-100%
CH8	W	W 0-100%

4. DMX512 4CHS mode

CH	FUNC	
CH1	R	R 0-100%
CH2	G	G 0-100%
CH3	B	B 0-100%
CH4	W	W 0-100%

5. Feature

Easy to operate, humanization design, no flicker while dimmer; Stable quality.
Applicable to photograph, camera, and TV station as well.